 
 
OPTT8070051AA .plt



AMP CONNECTOR: AMP 953264-1, WHITE

FUNCTION	PIN	NO.	FUNCTION
PGND	18P01	18P10	TURN-R I GHT
CRU I SE	18P02	18P11	TURN-LEFT
IMMOBILIZER	18P03	18P12	[[(+)
DOOR-OPEN	18P04	18P13	CNG
LOW-BEAM	18P05	18P14	HIGH-TEMP
0 I L-PRESSURE	18P06	18P15	BRAKE
REAR-FOG	18P07	18P16	BATTERY-CHARGE
AIR-BAG	18P08	18P17	ABS
FRONT-FOG	18P09	18P18	H [GH-BEAM



AMP CONNECTOR: AMP 953264-2, BLACK

FUNCTION	PIN NO.	FUNCTION
TEMP-INPUT	18P0118P10	_
DIAGNOSIS	18P0218P11	SPEED-INPUT
WEAR-PAD(-)	18P0318P12	TACHO-INPUT
WEAR-PAD(+)	18P0418P13	CNG-INPUT
SEAT-BELT	18P0518P14	FUEL-INPUT
CHECK-ENGINE	18P0618P15	IGNITION
ANT I -THEFT	18P0718P16	BATTERY
STOP	18P0818P17	SGND
FGND	18P0918P18	SGND

[#] connector pin assignment will be confirmed by siemens VDO Halla during PCB layout design.