




شرکت تهیه و توزیع قطعات و لوازم برقی  
ایران خودرو سایپا (ایسکو)

# راهنمای قطعات

# الکتریکی پژو



محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

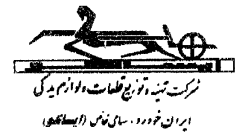

راهنمای تعمیرات

## Contents

<u>INSTRUCTIONS DOCUMENT:</u>	P1
<u>LIST COMPONENTS (SECTION 1):</u>	P11
<u>LIST COMPONENTS (SECTION 2):</u>	P20
<u>LIST COMPONENTS (SECTION 3):</u>	P27
<u>LIST SYMBOLS MULTI GROUP :</u>	P37
<u>LIST SYMBOLS POWER UNIT :</u>	P39
<u>LIST SYMBOLS EXTERIOR LIGHTING AND SIGNALLING :</u>	P41
<u>LIST SYMBOLS INTERIOR LIGHTING :</u>	P43
<u>LIST SYMBOLS DRIVER INFORMATION :</u>	P44
<u>LIST SYMBOLS WIPE- W ASH :</u>	P46
<u>LIST SYMBOLS ASSISTANCE MECHANISMS :</u>	P47
<u>LIST SYMBOLS DRIVER AIDS :</u>	P50
<u>LIST SYMBOLS DRIVING COMFORT :</u>	P51
<u>LIST HARNESSSES :</u>	P53

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات


#### سوئیچ‌ها:

در مدارهای الکتریکی و الکترونیکی برای قطع و وصل نمودن ارتباط یک قسمت از مدار بکار می‌روند و به دو صورت N.O و N.C می‌باشد.

N.O (NORMALLY OPEN): در حالت نرمال باز می‌باشند.


N.C (NORMALLY CLOSE): در حالت نرمال بسته می‌باشند.

اشکال زیر انواع این سوئیچ‌ها را نشان می‌دهد.

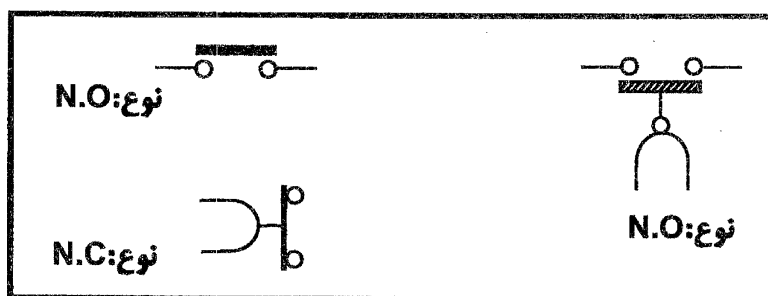


#### رئوستا:

در مدارهای الکتریکی و الکترونیکی برای تغییر ولتاژ (کم و یا زیاد کردن) بکار می‌روند.

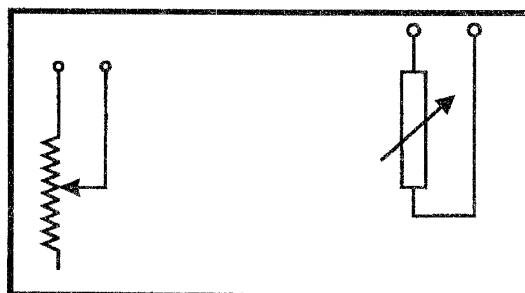

#### سوئیچ فشار:

این نوع سوئیچ در فشارهای مختلف وضعیت کنتاکتهایش تغییر می‌کند.

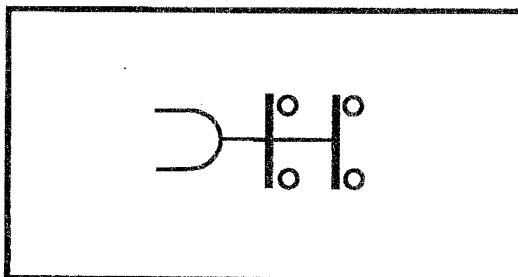

#### دیودها:


جهت مثلث دیود در مدار، جهت جریان را مشخص می‌کند، در مدارات برای اینکه از چند نقطه ولتاژ مثبت و یا منفی (بدنه) را به یک نقطه اعمال کرد و یا برای محافظت در مقابل ولتاژ معکوس از دیود استفاده می‌شود.

فصل : راهنمای قطعات	بخش :	محصول : پترو
---------------------	-------	--------------

### راهنمای تعمیرات


#### سنسور PTC:

این نوع سنسورها در مقابل افزایش دما، مقاومتشان افزایش پیدا می کند.

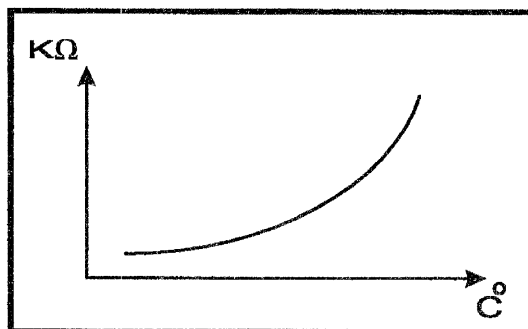

#### سنسور NTC:

این نوع سنسورها در مقابل افزایش دما، مقاومتشان کاهش پیدا می کند.

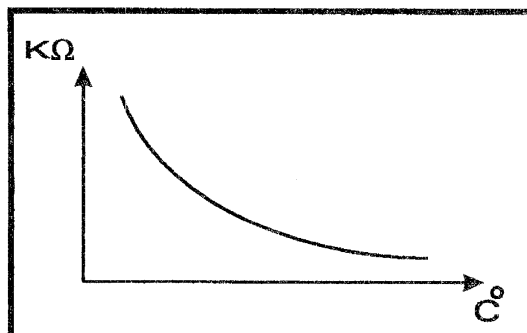

#### ترمو سوئیچها:


در یک دمای خاص این ترموسوئیچ ها در حالت وصل قرار می گیرند و با کاهش دما قطع خواهند شد.

#### رله ها:

برای قطع و وصل کردن جریانهای بالا در مدارات مورد استفاده قرار می گیرند.

دیود سری شده با رله : دیود محافظ در مقابل اتصال معکوس ولتاژ می باشد.


دیود موازی شده با رله : دیود هرزگرد برای دشارژ کردن جریان بوبین رله پس از قطع شدن ولتاژ بوبین آن.

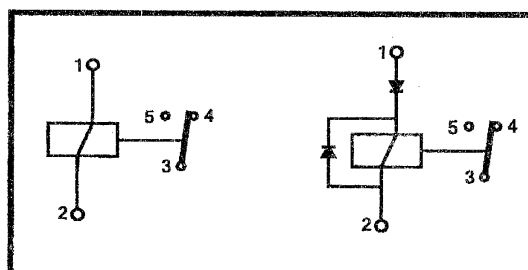

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات

طریقه خواندن شماتیک دیاگرام ها :

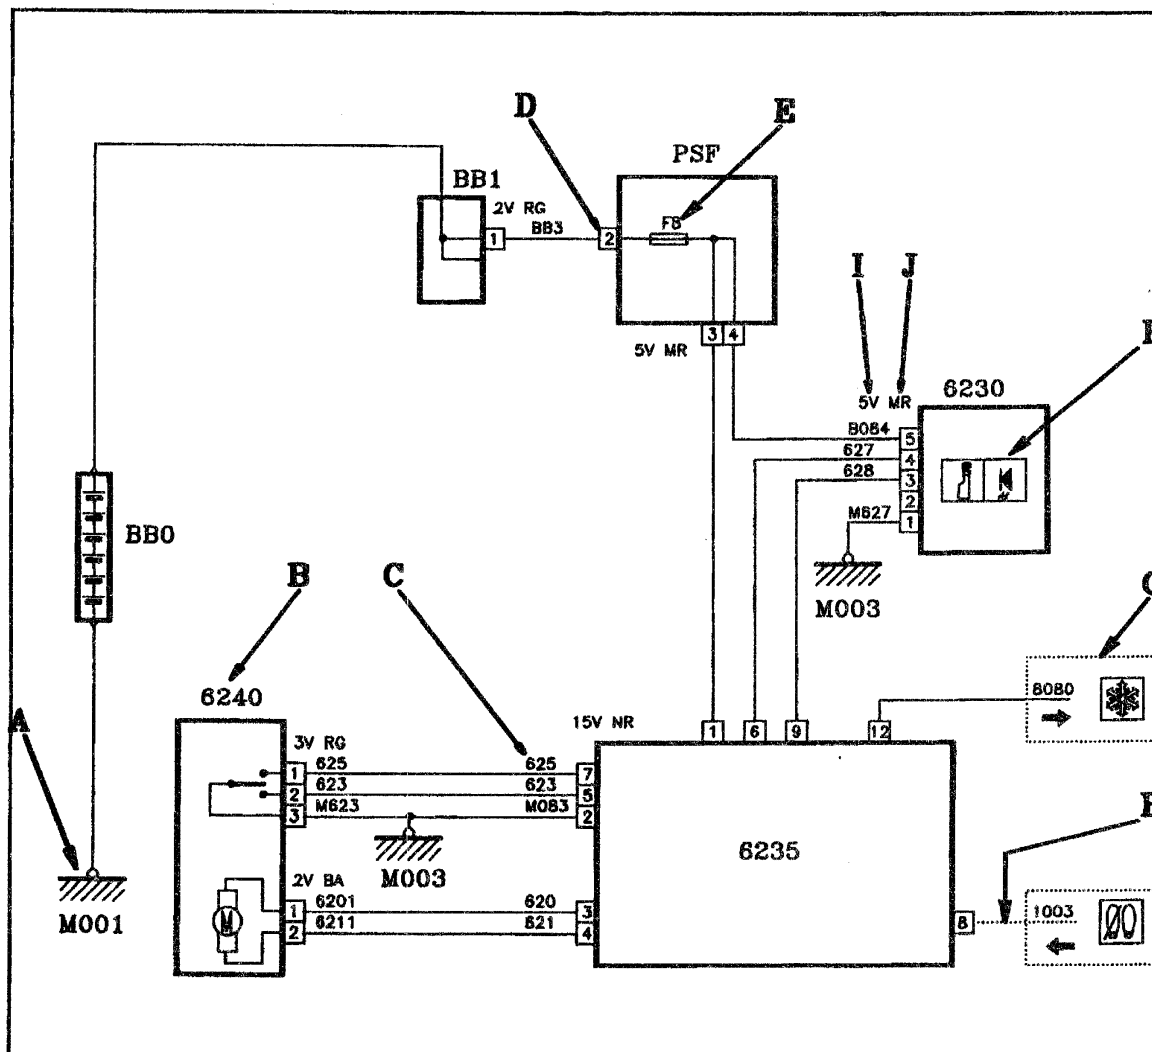

A: نشان دهنده منفی (بدنه)

B: شماره قطعه

C: شماره سیم

D: شماره پایه سوکت

E: شماره فیوز

F: دیاگرام قطعه

G: نشان دهنده اطلاعات ارسالی به قسمت های دیگر


H: نشان دهنده یک سیم وابسته به تجهیزات خودرو

I: نمایانگر تعداد پایه های کانکتور

J: رنگ کانکتور


محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات

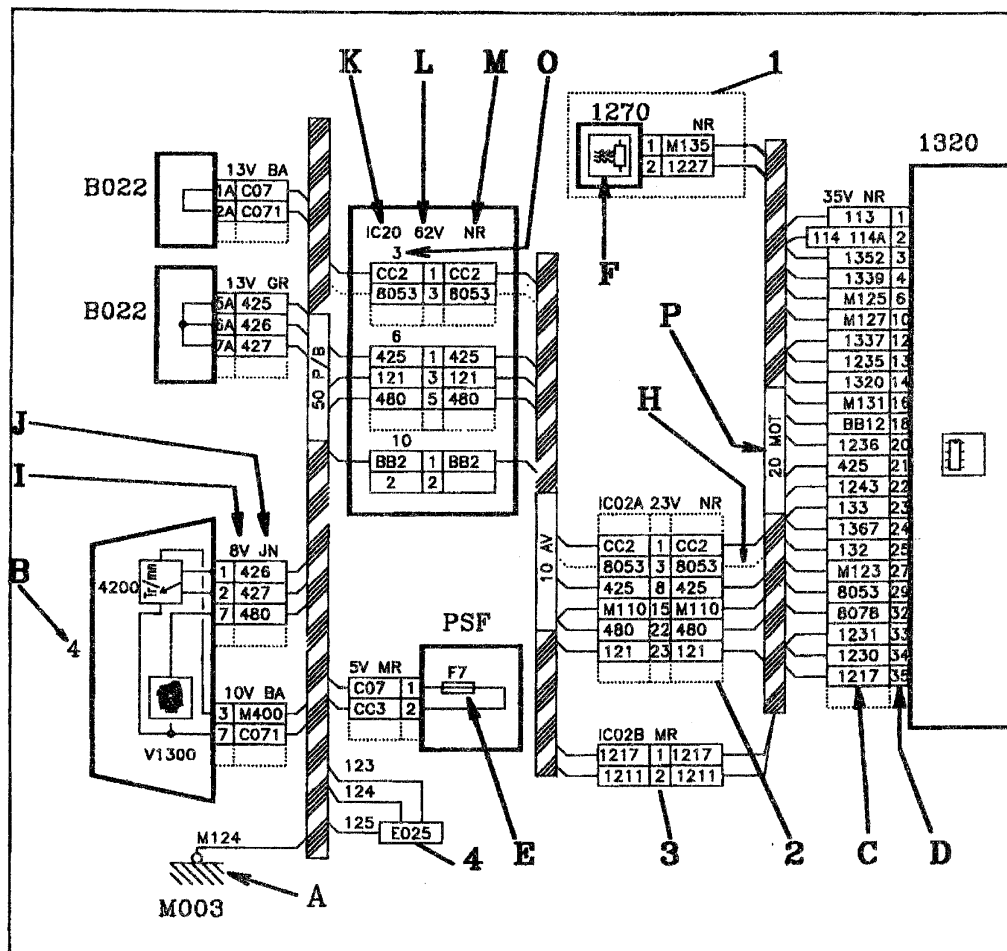

- |  |  |
|--|--|
| 1: نمایانگر یک حالت ویژه از یک اتصال وابسته به تجهیزات خودرو | F: نماد قطعه                               |
| 2: نمایانگر قسمتی از اتصال داخلی                             | H: نمایانگر یک سیم وابسته به تجهیزات خودرو |
| 3: نمایانگر یک اتصال داخلی کامل                              | I: تعداد پایه های کانکتور                  |
| 4: نمایانگر یک اتصال   | J: رنگ کانکتور                             |
| A: نمایانگر یک نقطه منفی (بدنه)                              | K: شماره اتصال داخلی                       |
| B: شماره قطعه  | L: تعداد پایه های اتصال داخلی              |
| C: شماره سیم   | M: رنگ اتصال داخلی                         |
| D: شماره پایه کانکتور  | O: شماره مدول                              |
| E: شماره فیوز  | P: مشخصات دسته سیم                         |

طریقه خواندن دیاگرام مونتاژ:

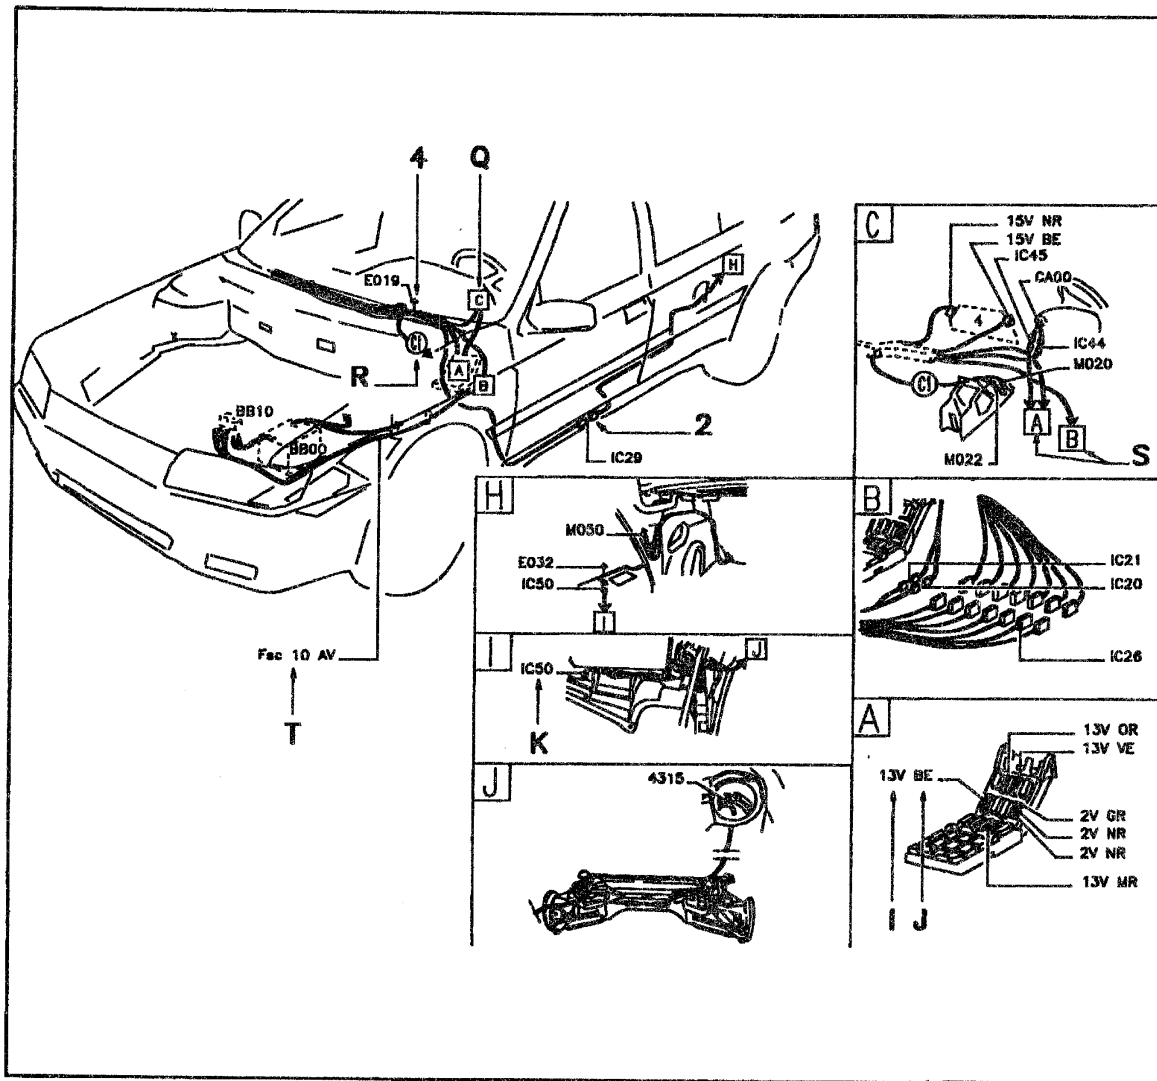


- 2: نمایانگر یک اتصال داخلی  
4: نمایانگر یک اتصال  
1: نمایانگر تعداد پایه های کانکتور  
J: رنگ کانکتور  
K: شماره اتصال داخلی  
Q: جزئیات را در صفحه نشان دهنده ها ببینید  
R: جزئیات C1 را در پنل C ببینید  
S: جزئیات را در پنل های مختلف دنبال کنید  
T: مشخصات دسته سیم

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات

راهنمای کد سیمها در سوئیچ اصلی:

پیشوند شماره سیم	توضیحات
BB	ولتاژ مثبت از خروجی جعبه تقسیم بدون ارتباط با سوئیچ اصلی
B	ولتاژ مثبت از خروجی فیوزی که ورودی آن پیشوند BB است
AA	ولتاژ مثبت از خروجی سوئیچ اصلی در حالات 1 یا 2
A	ولتاژ مثبت از خروجی فیوزی که ورودی آن پیشوند AA است
CC	ولتاژ مثبت از خروجی سوئیچ اصلی در حالات 2 یا 3
C	ولتاژ مثبت از خروجی فیوزی که ورودی آن پیشوند CC است
KK	ولتاژ مثبت از خروجی سوئیچ اصلی در حالت 2
K	ولتاژ مثبت از خروجی فیوزی که ورودی آن پیشوند KK است
VV	ولتاژ مثبت از خروجی کلید روشنایی صفحه نشان دهنده‌ها
V	ولتاژ مثبت از خروجی فیوزی که ورودی آن پیشوند VV است
M	انشعاب منفی باتری (بدنه)

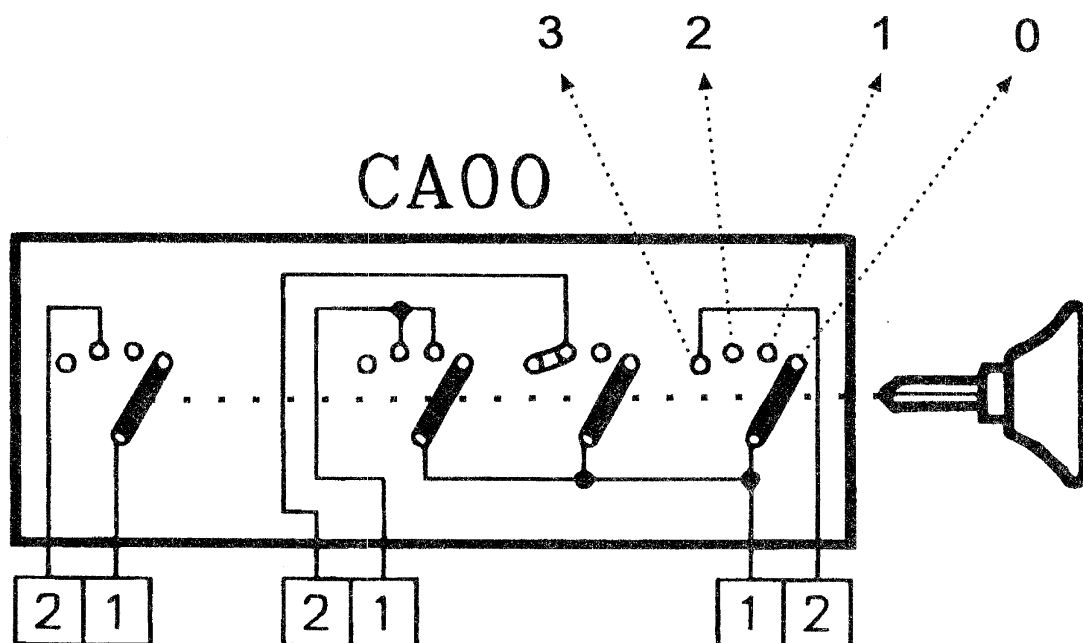



محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات

راهنمای کد رنگ ها:

کد	رنگ
BA	سفید
BE	آبی
BG	بژ (نخودی)
GR	خاکستری
JN	زرد
MR	قهوه‌ای
NR	سیاه
OR	نارنجی
RG	قرمز
RS	صورتی
VE	سبز
VI	بنفش

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

### راهنمای کد قطعات:

کد قطعات معمولاً "بصورت اعداد چهار رقمی می باشند که دو رقم سمت چپ آنها بیانگر مجموعه ای است که عملکرد قطعه، مربوط به آن می باشد. این مجموعه ها هشت عدد بوده و بصورت زیر می باشند:

### قطعات آمپر بالا:

- 10 \_\_ \_\_ : سیستم استارت و دینام
- 11 \_\_ \_\_ : سیستم جرقه
- 12 \_\_ \_\_ : سیستم سوخت رسانی و پاشش
- 13 \_\_ \_\_ : " " " "
- 14 \_\_ \_\_ : عیب یابی موتور
- 15 \_\_ \_\_ : سیستم خنک کننده
- 16 \_\_ \_\_ : گیربکس و شفت های محرک
- 17 \_\_ \_\_ : سیم کشی موتور - باتری

### روشنایی خارج از خودرو و علائم هشدار دهنده:

- 20 \_\_ \_\_ : چراغهای مه شکن عقب
- 21 \_\_ \_\_ : چراغهای ترمز
- 22 \_\_ \_\_ : چراغهای دنده عقب
- 23 \_\_ \_\_ : راهنما - فلاشر
- 24 \_\_ \_\_ : چراغهای نور پائین
- 25 \_\_ \_\_ : بوق
- 26 \_\_ \_\_ : چراغهای جلو - چراغهای روشنایی پلاک - لامپ های جانبی - چراغهای عقب

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

### روشنایی داخل خودرو

- 30 \_\_ : روشنایی داخل اتاق سرنشین  
31 \_\_ : روشنایی صندوق عقب و جعبه داشبورد

### اطلاعات راننده :

- 40 \_\_ : اطلاعات دمای مایع سیستم خنک کننده موتور و شارژ باتری  
41 \_\_ : اطلاعات روغن موتور  
42 \_\_ : اطلاعات دور موتور و هوای ورودی به سیلندرها  
43 \_\_ : اطلاعات سیستم سوخت رسانی  
44 \_\_ : اطلاعات ترمز  
45 \_\_ : اطلاعات سیستم تعلیق  
46 \_\_ : اطلاعات گیربکس و سیستم انتقال نیرو  
47 \_\_ : اطلاعات مربوط به هشدار دهنده های صوتی ( آلام )  
48 \_\_ : اطلاعات بررسی وضعیت موتور  
49 \_\_ : اطلاعات وضعیت در ها

### شوینده ها :

- 50 \_\_ : برف پاک کن شیشه جلو  
51 \_\_ : شوینده شیشه جلو  
52 \_\_ : برف پاک کن شیشه عقب  
53 \_\_ : شوینده شیشه عقب  
54 \_\_ : برف پاک کن و شوینده چراغهای جلو

### تجهیزات جانبی:

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات

- 60 \_\_ : شیشه بالابر های برقی جلو
- 61 \_\_ : شیشه بالا بر های برقی عقب
- 62 \_\_ : قفل مرکزی
- 63 \_\_ : صندلی های برقی
- 6400 تا 64 69 : آینه های برقی
- 6470 تا 64 99 : فرمان
- 65 \_\_ : کمر بند ایمنی
- 66 \_\_ : تنظیم ارتفاع چراغهای جلو
- 67 \_\_ : تجهیزات کمکی گیربکس و سیستم انتقال نیرو
- 68 \_\_ : تجهیزات نصب شده در عقب خودرو

### تجهیزات کمکی :

- 70 \_\_ : ترمزها
- 71 \_\_ : فرمان هیدرولیک
- 72 \_\_ : کامپیوتر سفری - ساعت
- 74 \_\_ : دمای هوای خارج خودرو

### سیستم های آسایشی :

- 80 \_\_ : کولر و بخاری
- 81 \_\_ : گرمکن شیشه عقب و آینه های جانبی
- 84 \_\_ : رادیو

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

**LIST COMPONENTS (SECTION 1) :**

- B001 : mixed bridge block 1.
- B002 : mixed bridge block 2.
- B003 : mixed bridge block 3.
- BB00 : battery \*.
- BB01 : battery assembly ( rear\* ) .
- BB02 : battery assembly ( lower front ) .
- BB03 : battery assembly ( upper front ) .
- BB04 : battery central assembly unit .
- BB05 : starter battery .
- BB06 : battery .
- BB10 : battery +ve control unit.
- BCP3 : 3 relay protection switch unit .
- BF00: (passenger compartment) fuse box.
- BF01 : fuse box (under bonnet).
- BF02 : fuse box \*(luggage compartment).
- BGP0 : centralized control unit (police ) .
- BH12 : 12 fuse box (passenger compartment).
- BH28 : 28 fuse box (passenger compartment).
- BMF1 : maxi fuse unit.
- BMF2 : maxi fuse unit.
- BMF3 : maxi fuse unit.
- BMF4 : maxi fuse unit.
- BM27 : engine fuse board with 27 fuse(s) .
- BM34 : engine fuse board with 34 fuse(s) .
- BS11 : built\_in systems interface .
- C001: diagnostic connector \*.
- C002 : breakdown wire connector .
- C004 : instrument panel diagnostic connector .
- C1030 : test connector –engine running information.
- C1042 : general circuit breaker optional connector .
- C1100 : ignition test connector .
- C1105 : ignition suppression connector .
- C1110 : ignition adjustment connector for idle.
- C1200 : injection test connector .
- C1250 : emission control adjustment connector .
- C1260 : supply pump fuse holder connector .
- C1265 : carburettor heating resistor fuse-holder connector .
- C1270 : EGR test connector .
- C1300 : injection-ignition test connector .
- C1310: ignition/injection fuse holder connector.
- C1360 : oxygen sensor heater fuse holder connector .
- C1400 : TDC connector.
- C1450: system development connector.
- C1500 : fan operation test connector .
- C1630 : \* test connector (\* automatic gearbox ) .
- C1700 : electronic management test connector.
- C1800 : LPG diagnostic connector \*.
- C200 : caravan socket connector ,
- C2310 : driving school dual control connector .
- C2600 : front fog-lamp fuse holder connector .

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- C310 : caravan lighting battery positive supply connector .  
 C4640 : fuse-holder connector for supply to chronograph.  
 C6235 : door locking test connector .  
 C6301 : test connector ( storing in memory\_seat ).  
 C6540 : pre-tensioning seat belts test connector.  
 C6560 : test connector airbag.  
 C6570 : air bag test connector + pre-tensioner .  
 C6640 : ride height circuit bleeding connector .  
 C6860 : electric hood test connector .  
 C7000 : anti-lock brake test connector .  
 C7001 : ABS power fuse holder connector .  
 C7050 : traction control test connector .  
 C7100 : variable power steering test connector.  
 C7215 : multifunction screen diagnostic connector .  
 C7710 : suspension test connector.  
 C8000 : heater test connector .  
 C8201 : immobiliser test connector \*.  
 C8400 : radio battery + ve connector .  
 C8600 : alarm test connector .  
 C861 : alarm supply connector \*.  
 C8630 : protection unit diagnostic connector .  
 CA00 : ignition switch \*.  
 CC51 : signaling central control assembly (police) .  
 CP00 : rear 12 V socket .  
 CPC0 : sliding door contact assembly (left) .  
 CPC1 : sliding door contact assembly (right) .  
 CP01 : front 12V socket .  
 CT00 : steering wheel rotary connector .  
 CV00 : switch unit under steering wheel (com 2000) .  
 DRA0 : shielded earth .  
 DRA1 : shielded earth 1 .  
 ECV0 : control assembly steering wheel \*.  
 MF00 : starting battery maxi fuse.  
 MF01 : alternator maxi fuse .  
 MF175 : MEGA\_ engine compartment fuse 175 A.  
 PS00 : connector board.  
 PSF0 : connection board -fuse box (passenger compartment) .  
 PSF1 : connection board -fuse box (under the bonnet) .  
 PSF2 : connection board -fuse box (luggage compartment).  
 V0004 : stop warning lamp.  
 V1000 : charge warning lamp.  
 V1001 : traction batteries correct charge lamp.  
 V1002 : traction batteries discharged warning lamp.  
 V1017 : 12 V converter fault warning lamp.  
 V1100 : ignition test warning lamp.  
 V1150 : pre-heat warning lamp.  
 V1200 : injection test warning lamp.  
 V1203 : pump cut-off light.  
 V1300 : engine diagnosis warning lamp.  
 V1700 : temporary fault warning lamp.  
 V1701 : forward drive warning lamp.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- V1702 : reverse drive warning lamp.
- V1703 : insulation fault warning lamp.
- V1800 : gas supply warning lamp .
- V2000 : rear fog lamp warning lamp.
- V2010 : front fog lamp warning lamp ..
- V2300 : hazard warning warning lamp.
- V2310 : right or left flasher indicator lamp.
- V2320 : LH direction indicator warning lamp.
- V2330 : RH direction indicator warning lamp.
- V2600 : side lamp warning lamp.
- V2610 : dipped beam warning lamp.
- V2620 : main beam warning lamp.
- V2660 : front fog lamp warning lamp.
- V4010: coolant low level warning lamp.
- V4017 : battery electrolyte level warning lamp.
- V4020 : engine coolant maximum temperature warning lamp.
- V4040 : screen wash fluid low level warning lamp.
- V4050 : water in diesel fuel warning lamp.
- V4110 : engine oil low pressure warning lamp.
- V4120 : engine oil low level warning lamp.
- V4130 : maximum engine oil temperature warning light.
- V4200 : choke warning lamp.
- V4205: air cleaner blocked warning light.
- V 4300 : low fuel level warning lamp.
- V 4320 : tank cap open warning lamp .
- V 4400 : hand brake warning lamp.
- V 4410: brake fluid low level warning lamp.
- V4420 : handbrake/low brake fluid level warning lamp.
- V4430 : brake pad wear warning lamp.
- V 4440 : blown bulb warning lamp.
- V 4600 : gear lever position warning lamp.
- V 4610 : gearbox oil temperature warning lamp.
- V4700 : door open warning lamp.
- V4730 : seat belt not buckled warning lamp.
- V 4800 : catalytic converter overheating warning lamp.
- V6235 : deadlocking pilot light,
- V6560 : air bag warning light ( front\*).
- V 6561 : side air bag warning lamp .
- V6640 : ride height correction fluid low level warning lamp.
- V6700 : differential lock test warning lamp.
- V6709 : reduction gear change warning lamp.
- V7000 : ABS diagnostic warning lamp.
- V7001 : ABS operational indicator light.
- V7050 : traction control diagnostic warning lamp.
- V7060 : traction control operation lamp.
- V7310 : cruise control indicator lamp.
- V7700 : suspension diagnostic warning lamp.
- V 7800 : stability check diagnostic warning light .
- V8018 : additional heating low fuel level warning lamp.
- V8110 : heated rear screen indicator lamp.
- V 8220 : transponder warning lamp .

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 1000 : starting safety switch.
- 1005: starter inhibitor relay.
- 1010: starter .
- 1020 : alternator (\*).
- 1025 : dual battery unit .
- 1030 : engine running signal relay.
- 1040 : general maintenance relay.
- 1041 : emergency stop switch.
- 1042: general relay.
- 1043 : re-setting push button.
- 1044 : diode unit .
- 1045 : auxiliary re\_arming push button .
- 1086 : alarm starter cut -off relay.
- 1100 : distributor.
- 1101 : engine coolant thermistor for advance module.
- 1102: advance module.
- 1104 : advance correction solenoid.
- 1105 : ignition amplifier module \*.
- 1110 : ignition distributor .
- 1115 : cylinder reference sensor \*.
- 1116 : cylinder reference sensor 1 .
- 1117 : cylinder reference sensor 2 .
- 1120 : knock sensor \* .
- 1121 : knock sensor 1 .
- 1122 : knock sensor 2 .
- 1125 : accelerator pedal switch.
- 1127 : ignition supply relay.
- 1130 : ignition control unit.
- 1131 : cylinder 1 ignition coil.
- 1132 : cylinder 2 ignition coil.
- 1133 : cylinder 3 ignition coil.
- 1134 : cylinder 4 ignition coil.
- 1135 : ignition coil.
- 1136 : ignition coil capacitor .
- 1137 : cylinder 5 ignition coil .
- 1138 : cylinder 6 ignition coil .
- 1140 : emission control module for carburettor.
- 1141 : coolant heating plugs supply relay 1 .
- 1142 : coolant heating plugs supply relay 2 .
- 1143 : coolant heating plugs supply relay 3 .
- 1145 : throttle opening solenoid valve.
- 1146 : coolant heating plugs supply relay 1 / 2 .
- 1147 : coolant heating plugs supply relay 3 / 4 .
- 1148 : coolant heater relay 1 .
- 1149 : coolant heater relay 2 .
- 1150 : pre-heat control unit (\*).
- 1155 : pre-heat relay.
- 1156 : post-heat relay.
- 1157 : post-heat thermal switch.
- 1158 : pre\_ post heating control unit .
- 1160: glow plugs.



محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

- 1161 : no.1 cylinder glow plug.
- 1162 : no.2 cylinder glow plug.
- 1163 : no.3 cylinder glow plug.
- 1164 : no.4 cylinder glow plug.
- 1190 : water circuit heater .
- 1200 : fuel pump relay.
- 1201: injection pump relay.
- 1202 : tachymetric relay.
- 1203 : inertia switch.
- 1204: impact safety relay.
- 1205 : fuel pump fuse.
- 1206 : decanting pump control unit.
- 1207 : decanting pump.
- 1208 : diesel injection pump (advance corrector, fuel cut-off solenoid).
- 1209 : scavenge pump.
- 1210: fuel pump.
- 1211 : fuel gauge pump.
- 1212 : air tank solenoid.
- 1213 : air pump relay.
- 1214: econoscope.
- 1215 : purge canister solenoid valve.
- 1216 : canister simulation resistor .
- 1217: canister bleed cut-off solenoid.
- 1218: ignition advance cut-off solenoid.
- 1219 : throttle potentiometer\* (\*injection, automatic transmission ) .
- 1220 : coolant temperature sensor .
- 1221 : diesel thermistor .
- 1222 : accelerometer .
- 1223 : injection air solenoid valve.
- 1224 : absorber closing solenoid valve.
- 1225 : idling regulation stepper motor (MMBA).
- 1226 : idle regulation motor and idle switch.
- 1227: fuel tank pressure sensor.
- 1228 : idle regulation motor and idle switch + Hall effect sensor .
- 1229 : turbo regulator solenoid with variable resistance.
- 1230 : supplementary air device.
- 1231 : automatic transmission idling speed solenoid unit.
- 1232 : idle maintaining solenoid valve.
- 1233 : turbocharger pressure regulation solenoid valve.
- 1234 : carburettor damper solenoid valve.
- 1235 : carburettor breather solenoid valve.
- 1236: overrun cut-off solenoid valve.
- 1237 : pulsair solenoid valve.
- 1238 : 2 volume V ASC solenoid.
- 1239 : idling regulation solenoid valve.
- 1240 : induction air temperature sensor .
- 1241: pulsair pump.
- 1242 : pulsair relay.
- 1243 : variable solenoid valve 1.
- 1244 : EGR proportional solenoid valve.
- 1245 : altitude switch.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

- 1246 : EGR function supply relay.
- 1247 : EGR coolant thermal switch.
- 1248 : EGR calibration resistor .
- 1249 : load lever potentiometer (EGR),
- 1250 : EGR exhaust gas recycling control unit.
- 1251 : EGR vacuum pump.
- 1252: diesel advance corrector relay.
- 1253 : all or nothing solenoid valve (EGR),
- 1254 : EGR load lever switch.
- 1255: fuel cut-off solenoid valve.
- 1256: advance solenoid valve (diesel).
- 1257: -flow solenoid (diesel).
- 1258: + flow solenoid (diesel).
- 1259 : + / -flow solenoid ( diesel ) .
- 1260 : injector needle lift sensor .
- 1261 : accelerator pedal position sensor .
- 1262 : motorised butterfly.
- 1263 : EGR + butterfly solenoid valve .
- 1264 : swirl solenoid valve .
- 1265 : carburettor heater thermal switch.
- 1266 : carburettor heater relay.
- 1267 : diesel butterfly solenoid valve \*( air intake ) .
- 1268 : variable solenoid valve 2.
- 1269 : carburettor heating resistor relay.
- 1270 : carburettor or throttle housing heater resistor .
- 1271: cut-off solenoid valve.
- 1272: cut-off solenoid assembly, carburettor heater resistor .
- 1273: oil breather re-heat resistor 1.
- 1274: oil breather re-heat resistor 2.
- 1275 : \*carburettor.
- 1276 : diesel heater .
- 1277 : diesel high pressure pump piston deactivation solenoid 3 .
- 1278 : start of compression sensor \*.
- 1280 : long 2 volume V ASC solenoid.
- 1281 : short 2 volume V ASC solenoid.
- 1301 : automatic transmission information relay (injection).
- 1302: injection and supply relay.
- 1303: injection and ignition supply relay.
- 1304 : engine management multi-function double relay.
- 1305 : mixture potentiometer .
- 1306 : automatic gearbox relay shunt ..
- 1307 : power multifunction double relay.
- 1308 : engine oil pressure sensor .
- 1309 : turbocharger air thermistor .
- 1310 : air flow sensor.
- 1311 : turbo pressure sensor.
- 1312 : induction air pressure sensor .
- 1313: engine speed sensor.
- 1314: altitude sensor.
- 1315 : injection resistor .
- 1316 : throttle position sensor . .

محصل: پژو	بخش:	فصل: راهنمای قطعات
-----------	------	--------------------

## راهنمای تعمیرات

- 1317: diesel pump lever position sensor.
- 1318 : throttle switch unit.
- 1319 : injection coding resistor.
- 1320 : engine management control unit.
- 1321 : diesel high pressure sensor \*.
- 1322 : diesel high pressure regulator \*.
- 1323 : high temperature sensor (exhaust gas).
- 1324 : proportional dosing solenoid valve.
- 1325 : petrol high pressure sensor \*.
- 1326 : injection unit supply fuse.
- 1327: cam position sensor (diesel pump).
- 1328 : rotor position sensor (diesel pump).
- 1329: slide position sensor (DIESEL pump)
- 1330: injector \*.
- 1331 : injector cylinder no.1.
- 1332 : injector cylinder no.2.
- 1333 : injector cylinder no.3.
- 1334 : injector cylinder no.4.
- 1335 : injector cylinder no.5.
- 1336 : injector cylinder no.6.
- 1337 : injector cylinder no.7.
- 1338 : injector cylinder no.8.
- 1339 : injector cylinder no.9.
- 1340 : injector cylinder no.10.
- 1342 : motor multi-function control unit.
- 1345: oxygen sensor heater relay.
- 1348 : oxygen sensor heater fuse.
- 1350 : front oxygen sensor .
- 1351 : rear oxygen sensor .
- 1352 : front downstream oxygen sensor \*.
- 1353 : front upstream oxygen sensor \*.
- 1354 : rear downstream oxygen sensor \*.
- 1355 : front upstream oxygen sensor \*.
- 1400 : TDC sensor.(\*)
- 1500 : fan relay.
- 1501 : cooling fan fuse.
- 1502 : left hand fan supply relay.
- 1503 : right hand fan supply relay.
- 1504 : left and right hand fan series supply relay.
- 1505 : cooling fan thermal switch.
- 1506 : two-speed cooling fan resistor .
- 1507: fan control (coolant) temperature sender unit via ECU .
- 1508 : low speed fan supply relay.
- 1509 : high speed fan supply relay.
- 1510 : fan \*.
- 1511 : right-hand fan.
- 1512: left-hand fan.
- 1513 : cooling fan electronic chopper .
- 1515: left-hand interference suppression filter,
- 1516: right-hand interference suppression filter.
- 1517 : cooling fan control flap .

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 1518 : cooling fan 3 speed resistor \*.
- 1520 : engine post -cooling thermal switch.
- 1525 : engine post -cooling relay.
- 1526 : engine post -cooling time switch.
- 1530 : post -cooling device shunt.
- 1550 : turbo coolant pump.
- 1551 : turbo coolant pump fuse.
- 1555 : turbo coolant pump control relay.
- 1600 : selector lever position switch.
- 1601: one-touch control lever sensor.
- 1602 : one\_touch control switch \*.
- 1606 : parking position buzzer supply relay.
- 1607 : auto transmission selector and display lamp supply relay.
- 1613: auto transmission engine speed sensor.
- 1615 : \*pressure sensor (\* automatic gearbox ).
- 1620 : vehicle speed sensor .(\*)
- 1621 : vehicle speed sensor (\*) ( \*automatic gearbox ).
- 1622 : automatic gearbox output speed sensor .
- 1625 : vehicle speed interface module.
- 1630 : automatic transmission control unit
- 1631 : torque reduction solenoid valve .
- 1632 : pedal position contact,
- 1635 : automatic gearbox electrohydraulic block.
- 1636 : auto transmission position sensor .
- 1637 : automatic gearbox kickdown switch.
- 1638 : auto transmission lever blocking actuator
- 1639 : accelerator pedal foot off contact.
- 1640 : automatic transmission programme selector.
- 1642 : gear lever blocking actuator control relay.
- 1643 : key blocking actuator control relay.
- 1644 : key blocking actuator .
- 1645 : automatic gearbox electronic piloting .
- 1646 : automatic gearbox solenoid valve block .
- 1700 : electric management control unit.
- 1701 : temperature monitoring module – lower front battery voltage.
- 1702 : temperature monitoring module – upper front battery voltage.
- 1703 : temperature monitoring module - rear battery voltage.
- 1704 : relay housing.
- 1705 : electronic tool kit.
- 1713 : accelerator potentiometer .
- 1714: energy gauge.
- 1718: electric motor cooling fan control thermistor
- 1722 : battery electrolyte cooling fan control thermistor .
- 1724 : additional heating switch,
- 1725 : additional heating.
- 1726 : additional heating fuel pump.
- 1727 : traction battery coolant pump.
- 1728 : electronic management control unit coolant pump .
- 1729 : electric vehicle coded anti\_start relay .
- 1730 : 73064 not found .
- 1732 : battery heating relay.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 1733 : battery heating resistor .
- 1740 : electric traction motor.
- 1746 : electric motor cooling fan.
- 1747: charging socket.
- 1748 : battery charging socket unit.
- 1800 : gas control unit .
- 1801 : absolute pressure sensor .
- 1802 : dosing solenoid valve .
- 1803 : tank solenoid valve .
- 1804 : vapour pressure relief solenoid valve .
- 1805 : 3 relay housing .
- 1806 : oxygen sensor relay .
- 1807 : diode bridge .
- 1808 : gas supply unit .
- 1809 : linear actuator.
- 1810 : petrol gas switch .
- 1811 : petrol / gas timer relay .
- 1812 : gas supply fuse unit .
- 1813 : diagnostic warning light cut off relay .
- 1814 : gas pressure gage .
- 1815 : LPG / petrol dilauge double relay .
- 1816 : 12 V / 5V voltage adopter fitting .
- 1817 : LPG gauge .
- 1818 : coolant thermistor ???! 8591 , " 150 )"
- 1819 : LPG gauge damping unit .
- 1820 : gas distribution motor .
- 1821 : LPG solenoid valve + gauge
- 1822 : adaption fitting diode 12V/5V .
- 1823 : adaption fitting resistor 12V/5V .
- 1824 : inlet air flap solenoid valve \*.
- 1825 : gas supply solenoid valve \*.
- 1826 : fuel pump cut off relay .
- 0002 : lighting and signalling switch.
- 2000 : rear fog lamp switch.
- 2001 : lighting/wiping stalk.
- 2002: driving school buzzer (Germany).
- 2003 : driving school instructor's control unit.
- 2004: driving school jack socket (Germany).
- 2005: rear fog lamp relay.
- 2006: driving school switch (Germany).
- 2007: driving school footwellighting (Germany).
- 2010: rear fog lamps (left side).
- 2011 : rear fog lamps ( center ) .
- 2015: rear fog lamps (right side)
- 2016 : rear fog lights control unit.
- 2100 : stop lamp switch \*.
- 2101 : redundant brake switch \*.
- 2110 : additional stop lamps.
- 2111 : additional stop lamps ((left side)).
- 2112 : additional stop lamps ((right side)).
- 2200 : reverse lamp switch.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 2202 : reverse drive control switch.
- 2210: left-hand reverse lamp switch.
- 2215: right-hand reverse lamp switch.
- 2300 : hazard warning switch.
- 2305 : flasher unit.
- 2310 : direction indicator switch.
- 2320: left-hand front direction indicator lamp.

### LIST COMPONENTS (SECTION 2) :

- 2325: right-hand front direction indicator lamp.
- 2330: left-hand rear direction indicator lamp (if separated).
- 2335: right-hand rear direction indicator lamp (if separated).
- 2340 : left-hand side repeater flasher.
- 2345: right-hand side repeater flasher.
- 2400 : side lamp day running lights line relay.
- 2401 : dipped beam day running lights relay.
- 2402 : day\_light running light relay shunt .
- 2410 : dipped beam relay.
- 2411: dim-dip relay.
- 2415: dim-dip resistor.
- 2500 : horn button.
- 2501 : horn button in steering wheel.
- 2505 : air horn compressor relay.
- 2510 : air horn compressor .
- 2520 : horns.
- 2521: low note horn.
- 2522: high note horn.
- 2523 : pedestrian buzzer .
- 2525 : air horn fuse.
- 2530: siren unit (police).
- 2531: police siren switch.
- 2532 : day/night police siren switch.
- 2535: siren speaker (police).
- 2600 : lamp rotator .
- 2605 : dipped beam relay.
- 2606 : main beam relay.
- 2610: left-hand headlamp.
- 2615: right-hand headlamp.
- 2620 : front left side light .
- 2625: front right side light .
- 2630 : left-hand tail lamp.
- 2631: right-hand tail lamp on boot lid.
- 2632: left-hand tail lamp on boot lid.
- 2633 : number plate right-hand lamp.
- 2634 : jack socket shunt .
- 2635: right-hand tail lamp.
- 2636 : number plate lamp.
- 2637 : jack plug for rotating lamp.
- 2638 : rotating lamp.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 2639 : rotating lamp switch.
- 2640 : left-hand front door marker lamp.
- 2641 : front right side marker .
- 2642 : front left side marker .
- 2643: rear right side marker.
- 2644 : rear left side marker .
- 2645: right-hand front door marker lamp.
- 2650: left-hand rear door marker lamp.
- 2651 : police car bar across roof.
- 2655: right-hand rear door marker lamp.
- 2656 : rear facing flashing stop lights.
- 2657 : rear facing flashing stop lights central unit ( roof tail lamps ).
- 2658 : rear roof lamp switch.
- 2659 : orange light switch \*.
- 2660 : front fog lamp switch.
- 2662 : front fog lamp inhibitor relay ( front\*).
- 2665 : 82247 not found .
- 2670: left-hand front fog lamp.
- 2675: right-hand front fog lamp.
- 2680 : long range driving lamp switch.
- 2685: long range driving lamp relay.
- 2690 : left hand long range driving lamp.
- 2695 : right hand long range driving lamp.
- 3000: left hand front door flange switch .
- 3001 : right hand front door flange switch.
- 3002: door aperture switch-rear left\_hand door .
- 3003: door aperture switch-rear right\_hand door .
- 3004 : lighting timer unit.
- 3005 : courtesy lamp timer relay.
- 3006 : courtesy lamp switch.
- 3010 : front courtesy lamp.
- 3012 : courtesy lamp (front LH).
- 3013 : courtesy lamp (front RH).
- 3015 : roof console + integral functions.
- 3019 : rear courtesy lamp switch.
- 3020 : rear courtesy lamp.
- 3022 : rear left hand courtesy lamp \*.
- 3023 : rear right hand courtesy lamp \*.
- 3024: left-hand courtesy lamp.
- 3025: right-hand courtesy lamp.
- 3029 : centre courtesy lamp switch.
- 3030 : central courtesy lamp.
- 3031: front right-hand reading lamp.
- 3032: front left-hand reading lamp.
- 3033: rear right-hand reading lamp.
- 3034 : rear left-hand reading lamp.
- 3035 : footwell illumination.
- 3036 : right hand footwell light .
- 3037 : left hand footwell light .
- 3040 : left-hand front door tread lamp.
- 3042 : left-hand rear door tread lamp.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 3045: right-hand front door tread lamp.
- 3047: right-hand rear door tread lamp.
- 3050 : lighting rheostat.
- 3051 : heater control panel lamp.
- 3052: console lamp.
- 3053 : cigar lighter lamp.
- 3054 : ashtray lamp.
- 3055 : radio cover control lamp.
- 3056 : ashtray cover control lamp.
- 3057 : left\_hand vent lighting \*.
- 3058 : right \_hand vent lighting \*.
- 3059 : center vent lighting \*.
- 3060: vanity mirror lamp (on the driver's side).
- 3061: vanity mirror lamp (passenger's side),
- 3062 : rear ashtry lighting \*.
- 3065 : map reading lamp.
- 3070 : selector lever lamp.
- 3075 : ignition switch lamp.
- 3080 : police visor lamp.
- 3085 : central passenger courtesy light switch ( white light ).
- 3086 : central passenger courtesy light switch ( blue light ).
- 3087 : parking lamps switch.
- 3088 : parking lamps relay.
- 3100 : boot switch.
- 3105: boot (or luggage compartment) lamp.
- 3106 : luggage compartment left\_hand lighting \*.
- 3107 : luggage compartment right\_hand lighting \*.
- 3110 : glove box lamp switch.
- 3115 : glove box lamp.
- 3120 : bonnet switch .
- 3121 : engine compartment lamp.
- 3122 : engine compartment lamp switch .
- 3125: luggage compartment lamp relay.
- 3126 : luggage compartment light timer relay.
- 0004 : instrument panel .(\*)
- 4000 : instrument panel centralised electronic module.
- 4005 : coolant temperature sensor .
- 4010 : engine coolant level switch.
- 4015 : engine coolant level unit.
- 4020 : engine coolant thermal switch.
- 4025 : temperature sensor –engine coolant thermal switch (\*gauge).
- 4026 : coolant temperature gauge.
- 4030 : coolant thermistor (gauge) .
- 4035 : pre-warning heat switch.
- 4040 : coolant and air conditioning thermistor .
- 4050 : water in fuel sensor .
- 4060 : battery charge indicator .
- 4100 : temperature gauge + engine oil level.
- 4101 : engine oil temperature display.
- 4102: engine oil level gauge.
- 4103: temperature sensor ( engine oil ) .



محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 4104: engine oil pressure sensor.
- 4105: engine oil pressure gauge.
- 4106 : \*pressure sensor / oil pressure switch.
- 4110: oil pressure switch.
- 4111 : temperature sensor + engine oil thermal switch.
- 4120 : engine oil level sensor.
- 4130 : engine oil thermal switch.
- 4200 : choke switch.
- 4205 : air cleaner pressure switch.
- 4210 : \*tachometer .( if separate )
- 4240 : induction pressure sensor.
- 4241: turbocharge pressure gauge.
- 4300 : low fuel level switch.
- 4310 : fuel gauge.
- 4311 : fuel pump electronic damping unit .
- 4315: fuel gauge (transmitter).
- 4320 : tank cap present switch.
- 4330 : fuel flow meter (trip computer).
- 4335 : fuel consumption interface unit.
- 4340 : fuel consumption.
- 4341: current fuel consumption indicator.
- 4400 : handbrake switch.
- 4401 : parking brake warning lamp diode.
- 4402 : diode buzzer reverse.
- 4405 : vacuum pressure switch control of the brake servo vacuum.
- 4410: brake fluid level switch.
- 4420 : ABS warning lamp relay.
- 4430 : front left brake pad wear contact.
- 4431 : front right brake pad wear contact.
- 4432 : rear left brake pad wear contact.
- 4433 : rear right brake pad wear contact.
- 4440 : bulb failure detection control unit.
- 4445: blown bulb relay (warning lamp).
- 4450 : brake warning lamp relay (Australia).
- 4500 : ride height correction fluid level switch.
- 4605: selection or programme display.
- 4610 : gearbox oil thermal switch.
- 4630 : speedometer.
- 4635 : tachograph electronic converter .
- 4700 : left-hand front door lock switch (door open detection) (if different 3000).
- 4701: right-hand front door lock switch (door open detection) (if different 3001).
- 4702: left-hand rear door lock switch (door open detection) (if different 3002).
- 4703: right-hand rear door lock switch (door open detection) (if different 3003).
- 4704 : bonnet closed switch (bonnet open detection).
- 4705 : boot lock switch (boot open detection),
- 4710: headlamp flash relay.
- 4715 : door open buzzer .
- 4716: parking brake position reminder buzzer.
- 4720 : lamps on buzzer relay.
- 4725: lamps on + ignition key in buzzer relay.
- 4730 : seat belt switch.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 4735: seat belt buzzer relay.
- 4740 : overspeeding buzzer .
- 4750: anti-lock braking buzzer relay.
- 4760 : ignition key in lock switch (buzzer control).
- 4765: ignition key in lock buzzer relay.
- 4790 : electric motor reminder buzzer .
- 4800 : catalytic converter temperature sensor .
- 4805 : catalytic converter temperature control unit.
- 4900 : door open indicator display.
- 4905 : points matrix.
- 4990 : charging flap open check contact.
- 0005 : screen wiper switch.
- 5000 : windscreen wipe/wash switch (if separate ).
- 5001: rain sensor.
- 5002 : rain sensor control relay.
- 5003 : rain sensor speed control relay.
- 5004 : automatic windscreen wiper control unit.
- 5005 : windscreen wiper relay.
- 5006: front/rear wiper relay.
- 5010 : windscreen wiper timer .
- 5015 : windscreen wiper motor .
- 5016 : parking stop unit.
- 5020: wash fluid heater.
- 5021 : pipe heater .
- 5100 : windscreen wash pump.
- 5105 : heated windscreen wash jets.
- 5110: wash liquid level sensor.
- 5115 : front/rear screen wash pump.
- 5200 : tailgate wipe/wash control (if is not 5).
- 5202 : rear screen wiper switch.
- 5203 : rear screen wash switch.
- 5204 : rear wiper motor contact ( if separate ).
- 5205 : tailgate wiper relay.
- 5210 : rear screen wiper timer .
- 5211: left\_rear screen wiper motor .
- 5212: right\_rear screen wiper motor .
- 5215 : rear screen wiper motor.
- 5300 : rear screen wash pump.
- 5400 : headlamp wash timer relay.
- 5401 : head lamp wash relay \*.
- 5405 : headlamp wash pump.
- 5406 : headlamp wash switch.
- 6000: left-hand door left-hand window lift switch.
- 6001: left-hand window lift front switch.
- 6002: right-hand window lift front switch.
- 6005: right-hand door right-handwindow lift switch.
- 6010: right-hand door left-hand window lift switch.
- 6015: left-hand door right-hand window lift switch.
- 6016 : window lift circuit diode + sun roof.
- 6020 : front window lift + sun roof relay.
- 6021 : window lift relay.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

- 6025 : window lift + sun roof supply re-connection relay.
- 6029 : driver's door one touch / safety auto reverse ECU .
- 6030 : one touch electric window control unit.
- 6031: passenger's one touch front electric window motor + control unit.
- 6032 : driver's one touch front electric window motor + control unit.
- 6033 : safety auto-reverse control unit.
- 6034 : safety auto-reverse sensor.
- 6035 : safety auto-reverse window motor \* (driver's door) .
- 6036 : window lift control board / rear-view mirror ( driver's door ) .
- 6037 : window lift control board / rear-view mirror (passenger's door).
- 6038 : safety auto-reverse window motor \* (passenger's door).
- 6040 : window lift motor (front LH).
- 6041: interior handle sensor (driver's door) .
- 6042 : exterior handle sensor (driver's door).
- 6043: interior handle sensor (passenger's door).
- 6044 : exterior handle sensor (passenger's door).
- 6045 : window lift motor (front RH).
- 6100 : left-hand rear window lift rear switch.
- 6101 : right rear window lift unit + motor (one-touch).
- 6102 : left rear window lift unit + motor (one-touch).
- 6105: right-hand rear window lift rear switch.
- 6110: left-hand rear window lift front switch.
- 6115: right-hand rear window lift front switch.
- 6116: rear electric window control panel .
- 6120 : rear window lift inhibitor switch.
- 6121 : rear function locking relay.
- 6122 : rear window lift inhibitor switch + alarm cut-off.
- 6125 : rear window lift relay.
- 6126 : rear window lift relay on + Ve AA.
- 6130 : window lift motor (rear LH).
- 6131 : right rear window lift unit + motor .
- 6132: left rear window lift unit + motor.
- 6133 : safety auto-reverse window motor \* ( rear left-hand door ) .
- 6134 : safety auto-reverse window motor \* ( rear right-hand door ) .
- 6135 : window lift motor (rear RH).
- 6140 : rear window lift relay +heated seat
- 6200 : front left-hand door open switch.
- 6202 : driver's door lock assembly.
- 6203 : switch insulation diode ( front door / rear \* ) .
- 6204 : rear wiper motor contact ( if separate ) .
- 6205: front right-hand door open switch.
- 6207: front passenger door lock assembly.
- 6210: rear left-hand door open switch.
- 6212: rear left-hand door lock assembly.
- 6215: rear right-hand door open switch.
- 6216 : boot lid open switch.
- 6217: rear right-hand door lock assembly.
- 6218: right-hand rear hinged door-lock assembly.
- 6219 : door unlocking safety relay.
- 6220 : door locking switch.
- 6221: right-hand rear hinged door locking switch.

فصل : راهنمای قطعات	بخش :	محصول : پژو
---------------------	-------	-------------

## راهنمای تعمیرات

- 6222 : boot lock assembly .
- 6230 : infra red door locking receiver .
- 6231 : high frequency receiver for central locking.
- 6235 : central locking control unit.
- 6237 : boot unlocking switch.
- 6240 : left-hand front door lock motor.
- 6242: front left-hand door deadlock motor.
- 6245: right-hand front door lock motor.
- 6247: front right-hand door deadlock motor.
- 6250: left-hand rear door lock motor.
- 6252: rear left-hand door deadlock motor.
- 6253 : left –hand rear hinged door locking motor .
- 6255: right-hand rear door lock motor.
- 6256: rear door lock motor.
- 6257: rear right-hand door deadlock motor.
- 6258 : right –hand rear hinged door locking motor .
- 6259: right-hand rear hinged door deadlocking motor .
- 6260 : boot or tailgate lock motor .
- 6261 : tailgate locking motor .
- 6262 : luggage compartment deadlocking motor diode .
- 6265 : fuel filler flap lock motor .
- 6266 : charging flap locking motor .
- 6300 : driver's seat sliding switch.
- 6301 : control unit for memorising seat and mirror positions.
- 6302: driver's seat adjustment assembly.
- 6303 : passenger's seat adjustment assembly.
- 6304: seat position memory ECU ( passenger ) .
- 6305: passenger's seat sliding switch.
- 6307 : keypad for memorising seat position.
- 6308: presence sensor.
- 6310 : driver's seat raising switch.
- 6311 : 324870294 not found .
- 6312 : 324870295 not found .
- 6315 : passenger's seat raising switch.
- 6320 : driver's seat slide motor .
- 6321: slide position sensor (driver's seat).
- 6322: height adjustment motor (driver's seat).
- 6323 : height adjustment motor (passenger's seat).
- 6325 : passenger's seat slide motor .(\*)
- 6331: driver's seat height position sensor.
- 6332: driver's seat cushion front height motor.
- 6333: driver's seat front cushion position sensor .
- 6334 : driver's seat cushion rear height motor.
- 6335 : driver's seat rear cushion position sensor .
- 6337: passenger's seat cushion front height motor .
- 6339 : passenger's seat cushion rear height motor .
- 6340 : driver's seat backrest switch.
- 6341: seatback position sensor (driver's seat).
- 6345 : passenger's seat backrest switch.
- 6346 : centre armrest switch.
- 6347 : centre armrest motor .

مجموعه : پژو	بخش :	فصل : راهنمای قطعات
--------------	-------	---------------------



## راهنمای تعمیرات

- 6350: driver's seat backrest angle motor.
- 6355 : passenger's seat backrest inclination motor .
- 6360: driver's seat adjustment relay.

### LIST COMPONENTS (SECTION 3) :

- 6365: passenger's seat adjustment relay.
- 6366 : slide high speed motor –passenger's seat.
- 6367: slide high speed motor –driver's seat.
- 6370 : adjustment pump + solenoid valve assembly- driver's seat.
- 6371 : passenger's seat backrest inflation contact.
- 6372: driver's seat backrest inflation contact.
- 6373 : driver's seat front stop position micro switch.
- 6374 : seat back locked position micro switch – driver's seat.
- 6375 : adjustment pump + solenoid valve assembly -passenger's seat.
- 6376 : passenger's seat front stop position micro switch.
- 6377 : seat back folded position micro switch passenger's seat.
- 6378: seat back locked position micro switch passenger's seat.
- 6379 : passenger's seat memorised position micro switch.
- 6380 : rear seat cushion adjustment switch.
- 6381 : rear seat adjustment motor .
- 6382: seat adjustment switch ( rear RH ).
- 6383 : seat adjustment switch ( rear LH ).
- 6384 : seat adjustment motor ( rear RH ).
- 6385 : seat adjustment motor ( rear LH ).
- 6386 : 729983686 not found .
- 6387 : 729983685 not found .
- 6388 : head-rest motor ( rear RH ).
- 6389 : head-rest motor ( rear LH ).
- 6390 : rear head-rest retracting switch .
- 6391: seat adjustment assembly ( rear RH ) .
- 6392 : seat adjustment assembly ( rear LH ).
- 6400: driver's side rear view mirror control.
- 6405 : passenger's side rear view mirror control.
- 6406 : rear view mirror control.
- 6407 : fold back rear view mirror unit.
- 6410 : driver's side rear view mirror (electric mirror/heated mirror).
- 6415: passenger's side rear view mirror (electric mirror/heated mirror).
- 6420: fold-back mirror switch\*.
- 6421 : reverse indexing unit.
- 6422 : reverse indexing switch.
- 6430 : electric interior mirror.
- 6435 : anti-dazzle unit.
- 6440 : electrochrome interior mirror
- 6470 : steering wheel adjustment switch.
- 6471 : steering wheel height adjustment motor.
- 6472 : steering wheel depth adjustment motor .
- 6500 : driver's passive restraint switch.
- 6505: passenger's passive restraint switch.
- 6510 : driver's passive restraint control unit.
- 6515 : passenger's passive restraint control unit

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 6520 : passive restraint time switch relay.
- 6530: driver's passive restraint motor.
- 6535: passenger's passive restraint motor.
- 6540 : driver's pre-tensioning seat belt control unit.
- 6541 : passenger's pre-tensioning seat belt control unit.
- 6542 : pre-tensioning seat belt control unit.
- 6543 : passenger presence detector \*.
- 6544 : presence detector ( rear RH ) .
- 6545 : presence detector rear LH.
- 6546 : presence of passenger detection unit \*.
- 6551 : right\_hand side air bag screen module \*.
- 6552 : left\_hand side air bag screen module \*.
- 6553 : air bag shunt resistor \*.
- 6554 : front top left\_hand side air bag module .
- 6555 : front top right\_hand side air bag module .
- 6556 : rear bottom left\_hand side air bag module .
- 6557 : rear bottom right\_hand side air bag module .
- 6558 : rear top right\_hand side air bag module .
- 6559 : rear top left\_hand side air bag module .
- 6560 : airbag ECU \*.
- 6561 : air bag auto interference suppression control unit.
- 6562: front bottom right-hand side air bag module .
- 6563: front bottom left-hand side air bag module .
- 6564 : passenger's air bag module.
- 6565 : driver's air bag module.
- 6566 : air bag light relay \*.
- 6567: right-hand impact detector.
- 6568: left-hand impact detector.
- 6569 : passenger air bag neutralisation switch.
- 6570 : air bag and pre-tensioners control unit.
- 6571 : side airbag unit ( right ) .
- 6572: side airbag unit ( left ) .
- 6573 : driver's side remot control .
- 6574 : passenger side unit .
- 6575 : pre-tensioning seat-belt ( driver's side ) .
- 6576: pre-tensioning seat-belt ( passenger's side ) .
- 6577 : pre-tensioner ( rear LH ) .
- 6578 : pre-tensioner ( rear RH ) .
- 6579 : central rear pre-tensioner .
- 6600 : headlamp height adjustment control.
- 6605 : head light height adjustment unit.
- 6610: left-hand headlamp height adjustment motor .
- 6615 : right-hand headlamp height adjustment motor .
- 6616 : front body height sensor \*.
- 6617 : rear body height sensor \*.
- 6620 : vehicle height correction control fuse.
- 6621 : vehicle height correction motor fuse.
- 6625 : vehicle high position switch.
- 6630 : parking brake information relay (vehicle height correction).
- 6631 : brake pedal information relay (vehicle height correction).
- 6632 : hydraulic circuit fluid pressure switch.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

- 6635 : vehicle height correction control unit -sensor .
- 6636 : vehicle height correction motor relay.
- 6637 : vehicle height correction solenoid valve relay.
- 6640 : vehicle height correction electric pump motor.
- 6645 : vehicle height correction solenoid valve.
- 6646 : vehicle height correction fluid level switch.
- 6700 : differential lock control switch.
- 6701 : differential lock control solenoid valve ( rear \* ) .
- 6702 : control solenoid valve ( change to 4\*4 ) .
- 6703 : control solenoid valve ( staying in 4\*4 ) .
- 6705 : differential lock fuse.
- 6706 : control relays ( change to 4\*4 ) .
- 6707 : switch ( change to 4\*4 ) .
- 6709 : reduction gear change closing switch.
- 6710 : front differential lock position switch.
- 6711 : closing sensor ( change to 4\*4 ) .
- 6712 : differential lock opening sensor ( rear \* ) .
- 6715 : rear differentia 1 lock position switch.
- 6720 : differential lock control unit.
- 6730 : front differential lock motor .
- 6735 : rear differential lock motor .
- 6740 : differential lock relay.
- 6750 : controlled differential control unit.
- 6755: traction control cut-off switch.
- 6760 : controlled proportional differential solenoid.
- 6800 : sun roof switch.
- 6801: end of sun roof travel switch .
- 6802: end of sun roof tilting switch .
- 6803 : sun roof slide relay control.
- 6804 : sun roof half travel control relay.
- 6805: sun roof relay.
- 6806 : sun roof zero point switch.
- 6807: sunroof relay in the sunroof assembly.
- 6808 : sun roof intermediate position switch.
- 6810 : sun roof motor .
- 6811 : sun roof one\_toch motor \*.
- 6820 : sun roof assembly.
- 6821 : safety auto-reverse sensor .
- 6825 : sunroof infra-red transmitter .
- 6826 : sun-roof infra red receiver.
- 6830 : sunroof control unit.
- 6840 : left-hand electric quarter light switch.
- 6842: left-hand electric quarter light return switch.
- 6845: right-hand electric quarter light switch.
- 6847: right-hand electric quarter light return switch.
- 6850: left-hand electric quarter light motor.
- 6855: right-hand electric quarter light motor.
- 6860: electric hood ECU.
- 6861 : electric hood switch.
- 6862 : electric hood electric pump motor
- 6863 : rear section opening solenoid .

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 6864 : rear section closing solenoid.
- 6865 : electric hood closing solenoid.
- 6866 : electric hood opening solenoid.
- 6867 : cover opening solenoid.
- 6868 : cover closing solenoid.
- 6870 : electric hood electric pump motor relay.
- 6871 : rear section ram switch.
- 6872 : electric hood ram switch.
- 6873 : cover ram switch.
- 6874 : electric hood switch.
- 6875 : electric hood buzzer
- 6876 : electric hood buzzer diode
- 6877 : boot open diode.
- 7000 : front left-hand anti-lock brake sensor
- 7001 : power steering fluid pressure switch.
- 7005: front right-hand anti-lock brake sensor.
- 7010: rear left-hand anti-lock brake sensor.
- 7013 : gear lever neutral switch,
- 7014 : rear wheel ABS sensor.
- 7015: rear right-hand anti-lock brake sensor,
- 7016 : ABS acceleration sensor
- 7017 : ABS control unit fuse,
- 7018 : ABS control unit relay
- 7019 : idle maintaining simulation resistor,
- 7020 : anti-lock brake control unit
- 7025 : ABS hydraulic unit ( GPF ).
- 7026 : brake assistance electric pump
- 7027 : ABS solenoids fuse.
- 7028 : anti-lock braking system shunt
- 7029 : ABS pump fuse.
- 7030 : electric pump unit .
- 7031 : electric pump unit relay .
- 7040 : additional regulation unit (ARU) .
- 7041: additional regulation unit electrical board.
- 7045 : clutch pedal information switch .
- 7046 : clutch position potentiometer.
- 7048 : piloted brake servo .
- 7049 : controlled brake servo control unit \*.
- 7050 : traction control ECU.
- 7055 : traction control hydraulic unit .
- 7060 : traction control throttle actuator .
- 7065 : traction control throttle potentiometer .
- 7075 : traction control cut -off switch.
- 7076 : ABS switch indicator light relay
- 7077: hill holder cut-off switch.
- 7078 : hill holder buzzer .
- 7080 : brake fluid level information diode.
- 7090 : brake servo vacuum pump,
- 7100 : power steering servo-regulator
- 7105 : variable power assisted steering control unit.
- 7110 : power steering servo.



محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 7111 : proportional solenoid variable power-assisted steering,
- 7112 : power steering pressure sensor.
- 7113 : power steering stop sensor \*.
- 7115 : power steering control relay
- 7120 : converter during pressures,
- 7121 : electric pump diode power-assisted steering.
- 7125 : power steering power relay
- 7200 : trip computer-cruise control information relay.
- 7201 : color display control unit .
- 7205 : trip computer display switch,
- 7210 : trip computer
- 7215 : multifunction screen.
- 7216 : multifunction screen key pad \*.
- 7220 : clock
- 7222 : outside temperature sensor,
- 7225 : clock + exterior .
- 7226: exterior temperature display
- 7300 : cruise control switch,
- 7305 : cruise control switch,
- 7306: cruise control override switch (clutch)
- 7307 : cruise control override relay.
- 7308: cruise control safety switch (brakes).
- 7309 : cruise control circuit shunt -\*engine check.
- 7310 : cruise control control unit.
- 7311 : cruise control fuse.
- 7312 : cruise control switch indicator light circuit diode.
- 7315 : cruise control vacuum pump- breather assembly.
- 7320 : cruise control override solenoid valve.
- 7400: external temperature display.
- 7500 : parking aid ECU .
- 7501 : laser distance guide.
- 7502 : laser range finder switch .
- 7503 : speaker ( parking aid ).
- 7504 : rear speakers ( parking aid ).
- 7505 : parking aid cut-off switch.
- 7506 : proximity sensor ( front LH\_ exterior ).
- 7507 : proximity sensor ( front LH\_ interior ).
- 7508 : proximity sensor ( front RH\_ exterior ).
- 7509 : proximity sensor ( front RH\_ interior ).
- 7510 : proximity sensor ( rear LH\_ exterior ).
- 7511: proximity sensor ( rear LH\_ interior ).
- 7512: proximity sensor ( rear RH\_ exterior ).
- 7513: proximity sensor ( rear RH\_ interior ).
- 7514 : buzzer ( parking aid ) .
- 7600 : under-inflation detector control unit.
- 7605 : under-inflation detector re-initialisation switch.
- 7700: steering wheel angle sensor.
- 7702 : front body height sensor \*.
- 7703 : rear body height sensor \*.
- 7704 : body height potentiometer .
- 7705 : body height sensor .

محمول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 7706 : brake pressure sensor .
- 7707 : accelerator pedal position sensor .
- 7708 : front wheel movement sensor.
- 7709 : rear wheel movement sensor .
- 7710 : suspension switch.
- 7711 : front right –hand wheel movement sensor .
- 7712: front left-hand wheel movement sensor.
- 7713: rear right-hand wheel movement sensor.
- 7714: rear left-hand wheel movement sensor.
- 7715 : suspension control unit.
- 7716: suspension solenoid valve (single or front),
- 7717: rear suspension solenoid valve.
- 7718 : roll correction solenoid valve.
- 7719 : ADAC electro-hydraulic unit (active anti-roll).
- 7720: front left-hand dan1per actuator.
- 7721 : shock absorber auto anti-interference front LH.
- 7722: control unit \*( 72716 not found).
- 7723 : ADAC accelerometer (72716 not found ) .
- 7724 : variable damping accelerometer .
- 7725: front right-hand damper actuator.
- 7726 : damper auto anti-interference -front RH.
- 7730: rear left-hand damper actuator.
- 7731 : shock absorber auto anti-interference - rear LH.
- 7735: rear right-hand dan1per actuator.
- 7736 : shock absorber auto anti-interference rear RH.
- 7739 : centralised electronic unit motor .
- 7740 : suspension electro-hydraulic unit.
- 7741: front right-hand suspension solenoid valve unit.
- 7742 : front left-hand suspension solenoid valve unit.
- 7743: rear right-hand suspension solenoid valve unit.
- 7744 : rear left-hand suspension solenoid valve unit.
- 7745 : vehicle height selector.
- 7746 : piloted rear suspension pad solenoid valve.
- 7747 : front suspension solenoid valve.
- 7748 : rear suspension solenoid valve.
- 7750 : suspension control board.
- 7760 : 73180 not found .
- 7770 : hydraulic fluid level and/or pressure warning buzzer .
- 7800 : stability checking ECU .
- 7801 : stability check cut\_off switch.
- 7802 : stability check relay .
- 7803 : stability check steering wheel angle sensor .
- 7804 : accelerometer gyro stability check
- 7805 : pre \_loud pump stability check .
- 7806 : hydraulic unit stability check .
- 7807 : brake circuit pressure sensor 1 .
- 7808 : brake circuit pressure sensor 2 .
- 8000 : air conditioning switch.
- 8001 : air conditioning compressor relay shunt .
- 8004: air conditioning cut-off control unit. \*
- 8005: air conditioning compressor relay.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 8006 : evaporator thermistor (if separate) .
- 8007 : pressostat.
- 8008 : air conditioning engine coolant temperature thermistor .
- 8009 : freon pressure sensor \*.,
- 8010 : coolant temperature unit. (\*)
- 8012 : air conditioning cut-off pressure switch.
- 8014: idling stability solenoid valve,
- 8015 : compressor cut -off relay controlled by coolant temperature unit.
- 8016 : compressor cut off relay controlled by the injection ECU.
- 8020 : air conditioning compressor .
- 8022 : air conditioning coolant thermal switch.
- 8025 : heater panel (if separate) .
- 8030 : passenger compartment air thermistor .
- 8031 : coolant thermistor .
- 8032: outside air thermistor.
- 8033 : sunshine temperature sender unit.
- 8034 : air to footwell temperature sender unit
- 8035 : passenger compartment temperature electronic thermostat (if separate) .
- 8036 : temperature display rheostat (if separate) .
- 8037 : air vent temperature sender unit.
- 8038 : luminosity sensor \*.
- 8040 : blower speed rheostat (if separate) .
- 8043: right-hand blower control module.
- 8044 : left-hand blower control module.
- 8045: blower control module (if separate) ,
- 8046 : blower motor resistor (if separated).
- 8047 : blower speed control (if separated).
- 8048 : blower relay.
- 8050 : heater blower motor (if separated) .
- 8051: right-handblower motor.
- 8052: left-hand blower motor.
- 8060 : heater unit.
- 8061 : 41414 not found .
- 8065 : mixing flap motor . (\*)
- 8067 : air inlet flap control.
- 8068 : left-hand air inlet flap reduction motor.
- 8069: right-hand air inlet flap reduction motor.
- 8070: air inlet flap reduction motor .
- 8071 : air distribution flap motor .(\*)
- 8072 : ventilation flap motor .
- 8073 : footwell/demisting flap motor.
- 8074 : breaker valve .
- 8080 : air conditioning ECU .
- 8090 : compressor protection diode.
- 8096 : additional heating operation information diode.
- 8097 : fuel heating control switch.
- 8098 : additional heating.
- 8099 : additional heating burner \*.
- 8100 : front cigar lighter .
- 8105 : rear cigar lighter .
- 8110 : heated rear screen switch.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 8112: rear screen demisting sensor.
- 8115: heated rear screen relay.
- 8116: rear screen heater time switch relay.
- 8118 : heated rear screen ( left ).
- 8119 : heated rear screen ( right ).
- 8120 : heated rear screen.
- 8121 : rear screen de-misting motor .
- 8125 : heated mirror (on the driver's side) (if separated electrical).
- 8130 : heated mirror (passenger's side) (if separated electrical).
- 8140 : heated windscreen.
- 8141 : heated windscreen switch.
- 8145 : heated windscreen relay.
- 8146 : heated windscreen timer unit .
- 8200 : coded anti-start keypad.
- 8201 : coded anti-start LED.
- 8203 : relay circuit diode injection control unit supply.
- 8205 : diagnostic indicator light circuit diode.
- 8206 : coded anti-start device door circuit diode.
- 8207 : immobiliser relay for diesel pump.
- 8208 : immobiliser / transponder \*.
- 8209 : transponder coil \*.
- 8220 : analogue module transponder .
- 8221 : control module transponder.
- 8300 : driver's heated seat switch.
- 8301 : electrically heated seats control unit.
- 8302 : driver's heated seat rheostat.
- 8303 : passenger's heated seat rheostat.
- 8305 : passenger's heated seat switch.
- 8306 : left-hand rear heated seat switch.
- 8307: right-hand rear heated seat switch.
- 8308: heated seat relay.
- 8310: heated seat (on the driver's side).
- 8311 : heated seat-thermostat.
- 8315: heated seat (passenger's side).
- 8320 : heated rear seat.
- 8321 : heated seat timer relay ( driver ) .
- 8322 : heated seat timer relay ( passenger ) .
- 8323 : heated seat timer relay ( rear LH ) .
- 8324 : heated seat timer relay ( rear RH ) .
- 8325 : left rear heated seat .
- 8326 : right rear heated seat .
- 8327 : 73596 not found .
- 8328 : 73597 not found .
- 8329 : 73606 not found .
- 8330 : 73600 not found .
- 8331 : 73601 not found .
- 8332 : 73602 not found .
- 8333 : 73603 not found .
- 8334 : 73604 not found .
- 8401 : impedance adaptor .
- 8402 : aerial lead.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 8403: aerial filter.
- 8404 : aerial.
- 8405 : electric aerial.
- 8406 : electric aerial module.
- 8407 : duplexer .
- 8408 : radio amplifier .
- 8409 : heated rear screen aerial assembly \*.
- 8410 : radio.
- 8411: radio balance front left/right.
- 8412: radio balance front/rear.
- 8413: radio control.
- 8415: compact disc player.
- 8416: compact disc interface.
- 8420 : front door speakers (on the driver's side).
- 8421 : front speakers.
- 8422 : front door speakers (left).
- 8423 : front door speakers ( right ).
- 8425: front door speakers (passenger's side).
- 8430 : speaker (rear LH).
- 8435 : speaker (rear RH).
- 8440 : left-hand front tweeter speaker.
- 8442: front left-hand mid range speaker.
- 8443 : speaker boomer ( front LH ).
- 8445: right-hand front tweeter speaker.
- 8447 : front right -hand mid range speaker .
- 8448 : speaker boomer ( front RH ).
- 8450: left-hand rear tweeter speaker.
- 8452 : rear left-hand mid range speaker .
- 8453 : speaker boomer ( rear LH ).
- 8455: right-hand rear tweeter speaker.
- 8457: rear right-hand mid range speaker.
- 8458 : speaker boomer ( rear RH ).
- 8460 : headphone socket left-hand rear.
- 8465: headphone socket right-hand rear.
- 8470 : police radio electrical supply ( front \*).
- 8471 : rear police radio supply 1 .
- 8472 : rear police radio supply 2 .
- 00.8475 : radio telephone instrument panel.
- 8480 : radio telephone transmitter-receiver .
- 8481 : car-phone loudspeaker .
- 8482 : car-phone microphone.
- 8483 : car-phone on warning buzzer.
- 8484 : car phone aerial.
- 8485 : car-phone key pad.
- 8500 : navigation control unit.
- 8501 : GPS aerial \*.
- 8502 : on\_board navigation system speaker \*.
- 8503 : control key pad \*.
- 8504 : traffic information unit \*.
- 8505 : traffic information switch \*.
- 8600 : alarm unit.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

- 8601 : anti-theft alarm key switch.
- 8602 : alarm ultrasonic unit interior protection unit ( unit theft ).
- 8603 : alarm switch.
- 8604 : ultrasonic sensor .
- 8605 : alarm siren.
- 8606 : alarm LED.
- 8607 : ultrasonic transmitter .
- 8608 : ultrasonic receiver .
- 8609 : ultrasonic transmitter + alarm LED.
- 8610 : luggage compartment alarm contact .
- 8611 : bonnet alarm contact .
- 8612: right-hand rear hinged door alarm switch.
- 8613: alarm rear left-hand door switch.
- 8614: alarm rear right-hand door switch.
- 8615 : dipped beam supply relay for alarm.
- 8616: alarm relay.
- 8617: anti-theft alarm warning relay.
- 8618 : anti-lifting contact.
- 8630 : passenger compartment protection unit.
- 8700 : electric sun-blind motor.
- 8701 : electric blind switch.
- 8702 : rear electric blind switch.
- 9000 : central unit.
- 9005 : left front side lamp station.
- 9010 : fan unit station.
- 9015 : right front side lamp station.
- 9020 : wipe/wash station.
- 9025 : sensor information station.
- 9030 : left front door station.
- 9031 : seat unit .
- 9035 : instrument panel station.
- 9040 : display station.
- 9045 : passenger compartment station.
- 9050 : right front door station.
- 9055 : signalling switch station.
- 9056 : automatic lighting unit .
- 9060 : wiper switch station.
- 9065 : console station.
- 9070 : towing station.
- 9075 : left tail lamp station.
- 9080 : tailgate station.
- 9085 : right tail lamp station.

**LIST SYMBOLS MULTIGROUP :**



Fig: 1

Dials.



Fig: 2

Switch manual.



Fig: 3

Switch.



Fig: 4

Door aperture switch.



Fig: 5

Relay.



Fig: 6

Control unit.



Fig: 7

Fuse.



Fig: 8

Spanner.



Fig: 9

Resistance.



Fig: 10

Variable resistor sensor.



Fig: 11

Thermistor.



Fig: 12

Variable resistance depending on pressure.



Fig: 13

Thermal switch.



Fig: 14

Pressure switch.



Fig: 15

Engine.



Fig: 16

Pump.



Fig: 17

Compressor.



Fig: 18

Diode.



Fig: 19

Solenoid valve.



Fig: 20

Bridge block.



Fig: 21

Hazard warning.



Fig: 22

Instrument panel.



Fig: 23

Keypad.



Fig: 24

Control electrical.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------



Fig: 25

Sensor.



Fig: 26

Front.



Fig: 27

Rear.



Fig: 28

Front LH.



Fig: 29

Front RH.



Fig: 30

Rear LH.



Fig: 31

Rear RH.



Fig: 32

Rotary connector.



Fig: 33

Caravan attachment.



Fig: 34

Intermittently.



Fig: 35

Capacitor.



Fig: 36

Vehicle immobilisation.



Fig: 37

Rheostat.



Fig: 38

Potentiometer.



Fig: 39

Shunt.



Fig: 40

Generator.



Fig: 41

Interference suppression.



Fig: 42

Terminal box.



**LIST SYMBOLS POWER UNIT :**



Fig: 1

Battery.



Fig: 2

Starter.



Fig: 3

Alternator.



Fig: 4

Starter cut-off.



Fig: 5

Charging socket.



Fig: 6

Battery.



Fig: 7

Battery discharged.



Fig: 8

Ignition system.



Fig: 9

Carburettor.



Fig: 10

Ignition advance.



Fig: 11

Diesel.



Fig: 12

Coil.



Fig: 13

Accelerator (manual).



Fig: 14

Engine stopped diesel.



Fig: 15

Water in diesel fuel.



Fig: 16

Water in diesel fuel.



Fig: 17

Glow plug.



Fig: 18

No. injector.



Fig: 19

Engine failure.



Fig: 20

TDC sensor.



Fig: 21

Cylinder reference sensor.



Fig: 22

Speed sensor.



Fig: 23

Piezo-electric



Fig: 24

Oxygen sensor.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------



Fig: 25

Choke flap control.



Fig: 26

Air flow sensor.



Fig: 27

Cooling system.



Fig: 28

Fan.



Fig: 29

Automatic gearbox.



Fig: 30

Cluth engagement.



Fig: 31

Cluth engagement.



Fig: 32

Differential lock.



Fig: 33

Gear lever (automatic gearbox).



Fig: 34

electrical incident.



Fig: 35

Forward gear.



Fig: 36

Reverse.

**LIST SYMBOLS EXTERIOR LIGHTING AND SIGNALLING :**



Fig: 1

Rear fog lamps.



Fig: 2

Stop lamps.



Fig: 3

Additional stop lamps.



Fig: 4

Stop lamps rear LH.



Fig: 5

Stop lamps rear RH.



Fig: 6

Reversing lamps.



Fig: 7

Direction indicator.



Fig: 8

Left-hand direction indicator.



Fig: 9

Right-hand direction indicator.



Fig: 10

Hazard warnings.



Fig: 11

Left-hand side repeater flasher.



Fig: 12

Right-hand side repeater flasher.



Fig: 13

Running lights.



Fig: 14

Horns.



Fig: 15

Pedestrian buzzer.



Fig: 16

Lighting stalk.



Fig: 17

Dipped beam.



Fig: 18

Main beam.



Fig: 19

Side lamps/orange light.



Fig: 20

Rear fog lamps.



Fig: 21

Front left side light.



Fig: 22

Front right side light.



Fig: 23

Left-hand tail lamp.



Fig: 24

Right-hand tail lamp.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

### راهنمای تعمیرات



Fig: 25

Rear left-hand light on tailgate.



Fig: 37

Rear hinged door right.



Fig: 26

Rear right-hand light on tailgate.



Fig: 38

Tailgate.



Fig: 27

Number plate lamp.



Fig: 28

Number plate right-hand lamp.



Fig: 29

Rotating lamp.



Fig: 30

Blown bulbs.



Fig: 31

Rear facing flashing stop lights.



Fig: 32

Left-hand tail light.



Fig: 33

Right-hand tail lamp.



Fig: 34

Cut-off front fog lamps.



Fig: 35

Day/night.



Fig: 36

Rear hinged door left.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

**LIST SYMBOLS INTERIOR LIGHTING :**



Fig: 1

Central courtesy lamp.



Fig: 13

Map reading lamp rear LH.



Fig: 2

Courtesy lamp front LH.



Fig: 14

Map reading lamp rear RH.



Fig: 3

Courtesy lamp front RH.



Fig: 15

Door aperture switch front LH.



Fig: 4

Courtesy lamp rear LH.



Fig: 16

Door aperture switch front RH.



Fig: 5

Courtesy lamp rear RH.



Fig: 17

Door aperture switch rear LH.



Fig: 6

Left-hand central courtesy light.



Fig: 18

Door aperture switch rear RH.



Fig: 7

Right-hand central courtesy light.



Fig: 19

Courtesy mirror light.



Fig: 8

Front courtesy lamp.



Fig: 20

Bulb.



Fig: 9

Rear courtesy lamp.



Fig: 10

Map reading lamp cent .



Fig: 11

Map reading lamp front LH.



Fig: 12

Map reading lamp front RH.

محصول : پترو	بخش :	فصل : راهنمای قطعات
--------------	-------	---------------------

### راهنمای تعمیرات

#### LIST SYMBOLS DRIVER INFORMATION :



Fig: 1

Coolant temperature.



Fig: 2

Stop warning lamp.



Fig: 3

Screenwash level.



Fig: 4

Coolant level.



Fig: 5

Water battery.



Fig: 6

Oil pressure.



Fig: 7

Engine oil temperature.



Fig: 8

Engine oil level.



Fig: 9

Engine oil level.



Fig: 10

Level/engine oil pressure.



Fig: 11

Engine oil temperature display.



Fig: 12

Engine oil level gauge.



Fig: 13

Tachometer.



Fig: 14

Air temperature.



Fig: 15

Clogging air cleaner.



Fig: 16

Clogging air cleaner.



Fig: 17

Turbocharger.



Fig: 18

Turbocharge pressure gauge.



Fig: 19

Exhaust gas recycling.



Fig: 20

Fuel minimum level.



Fig: 21

Fuel gauge.



Fig: 22

Fuel pump.



Fig: 23

Parking lights.



Fig: 24

Handbrake.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات



Fig: 25

Brake system failure.



Fig: 26

Handbrake / brake fluid level.



Fig: 27

Brake pad wear.



Fig: 28

Brake pads.



Fig: 29

Gearbox fluid temperature.



Fig: 30

Buzzer.



Fig: 31

Over-heating of the catalytic converter.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

## راهنمای تعمیرات

### LIST SYMBOLS WIPE-WASH :



Fig: 1

Screen wiper front.



Fig: 2

Wiper timer.



Fig: 3

Rain sensor.



Fig: 4

Screen wash front.



Fig: 5

Front screen wipe/wash.



Fig: 6

Rear wiper.



Fig: 7

Screen wiper rear LH.



Fig: 8

Screen wiper rear RH.



Fig: 9

Rear screen-wash.



Fig: 10

Rear screen wiper/wash.



Fig: 11

Headlamp wipe-wash/headlamp wash.



**LIST SYMBOLS ASSISTANCE MECHANISMS :**



Fig: 1

Electric windows.



Fig: 13

Opening the doors front.



Fig: 2

Electric window.



Fig: 14

Bonnet opening.



Fig: 3

Electric window lift.



Fig: 15

Boot opening.



Fig: 4

Electric window lowering.



Fig: 16

Fuel filler cap.



Fig: 5

Electric windows lock rear.



Fig: 17

High frequency receiver for central locking.



Fig: 6

Locking.



Fig: 18

Infra red door locking receiver.



Fig: 7

Locking of the doors.



Fig: 19

Opening the doors rear.



Fig: 8

Opening the doors.



Fig: 20

Infra-red transmitter.



Fig: 9

Door aperture front LH.



Fig: 21

Seat.



Fig: 10

Door aperture front RH.



Fig: 22

Slide adjustment (seat).



Fig: 11

Door aperture rear LH.



Fig: 23

Front cushion adjustment (seat).



Fig: 12

Door aperture rear RH.



Fig: 24

Rear cushion adjustment (seat).

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات



Fig: 25

Backrest adjustment front seat.



Fig: 26

Height adjustment front seat.



Fig: 27

Arm-rest adjustment.



Fig: 28

Adjustment of side supports.



Fig: 29

Lumbar support adjustment upwards.



Fig: 30

Lumbar support adjustment downwards.



Fig: 31

Headrest electrical.



Fig: 32

Electric mirror.



Fig: 33

Indexed rear view mirror.



Fig: 34

fold-back mirror.



Fig: 35

Electric interior mirror.



Fig: 36

Steering wheel.



Fig: 37

Steering column.



Fig: 38

Steering column horizontal adjustment.



Fig: 39

Steering column vertical adjustment.



Fig: 40

Locking seat belt.



Fig: 41

Driver's side airbag.



Fig: 42

Passenger's side airbag.



Fig: 43

Airbag.



Fig: 44

Headlamp height corrector.



Fig: 45

Body height sensor.



Fig: 46

Sun roof.



Fig: 47

Sun roof closing.



Fig: 48

Sun roof toe-out.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

راهنمای تعمیرات



Fig: 49

Electrically operated hood.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

### راهنمای تعمیرات

#### LIST SYMBOLS DRIVER AIDS :



Fig: 1

Anti-lock brakes.



Fig: 13

Exterior temperature display.



Fig: 2

Front LH wheel sensor.



Fig: 14

Tyre deflation sensor.



Fig: 3

Front RH wheel sensor.



Fig: 15

Heavy duty suspension.



Fig: 4

Rear LH wheel sensor.



Fig: 16

Hydroactive suspension.



Fig: 5

Rear RH wheel sensor.



Fig: 17

Accelerator pedal.



Fig: 6

Rear wheel sensors.



Fig: 18

Shock absorbers.



Fig: 7

Front wheel sensors.



Fig: 8

Traction control.



Fig: 9

Range.



Fig: 10

Digital clock.



Fig: 11

Analogue clock.



Fig: 12

Cruise control.

### LIST SYMBOLS DRIVING COMFORT :



Fig: 1

Air conditioning.



Fig: 2

Air conditioning switch.



Fig: 3

Air recirculation.



Fig: 4

Air inlet flap reduction motor.



Fig: 5

Temperature adjustment.



Fig: 6

Sunshine.



Fig: 7

Foot ventilation.



Fig: 8

Additional heating.



Fig: 9

Cigar lighter.



Fig: 10

Heated rear screen.



Fig: 11

Heated front screen.



Fig: 12

Heated mirror.



Fig: 13

Heated resistor.



Fig: 14

Heated rear screen left.



Fig: 15

Heated rear screen right.



Fig: 16

Coded anti-start.



Fig: 17

Heated seat.



Fig: 18

Radio.



Fig: 19

Speaker.



Fig: 20

Electric aerial.



Fig: 21

Fuse.



Fig: 22

Radio telephone.



Fig: 23

Compact disc.



Fig: 24

Balance.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

### راهنمای تعمیرات



Fig: 25

Speaker front LH.



Fig: 37

Ultrasonic transmitter.



Fig: 26

Speaker front RH.



Fig: 38

Ultrasonic receiver.



Fig: 27

Speaker rear LH.



Fig: 39

Jack socket.



Fig: 28

Speaker rear RH.



Fig: 29

Headphones.



Fig: 30

Socket.



Fig: 31

Control on the steering wheel.



Fig: 32

Micro.



Fig: 33

Compact disc player.



Fig: 34

Navigation.



Fig: 35

Alarm.



Fig: 36

Deletion alarm.

محصول : پژو	بخش :	فصل : راهنمای قطعات
-------------	-------	---------------------

**LIST HARNESSES :**

- 01 CBP battery positive cable.
- 02 CBN battery negative cable.
- 03 CB/ A V connecting cable, front batteries.
- 04 CB/CE connecting cable, batteries to electronic unit.
- 05 CE/MOT connecting cable, electronic unit to motor.
- 06 CB/ A V / AR connecting cable, front batteries to rear .
- 07 FMS earth lead.
- 10 PR main harness.
- 12 US FR brake pad wear harness.
- 13 A VERT/S horn harness.
- 14 RG/V cruise control harness.
- 15 F/A V front panel harness.
- 16 GMV fan harness.
- 17 BR/ A V front fog light harness.
- 17 BR/A V/C front fog lamp supplementary harness.
- 18 BV A automatic gearbox harness.
- 19 BT /EL electronic control unit harness.
- 20 MOT engine harness.
- 22 MOT/C additional engine harness.
- 23 BR/HY hydraulic buzzer harness.
- 24 BR/SV excessive speed buzzer harness.
- 26 GI heated jet harness.
- 27 EV/A V front windscreen wiper harness.
- 28 CAPT /PL rain sensor harness.
- 30 ABR ABS harness.
- 32 SUSP suspension harness.
- 36 ALA/ A alarm harness.
- 39 DA power steering harness.
- 43 A/E harness driving school.
- 44 CSL console harness.
- 45 CAPT/VOL internal sensor harness.
- 46 HAB passenger compartment harness.
- 47 ECL V/P glove-box lighting harness.
- 48 PLAF/C additional courtesy light harness.
- 49 P/B/C additional fascia harness.
- 50 P/B fascia harness.
- 51 J gauge harness.
- 52 PLAF courtesy lamp harness.
- 53 SAC air bag harness.
- 54 CEINT pre-tensioning seat belts harness.

محصول: پژو	بخش:	فصل: راهنمای قطعات
------------	------	--------------------

## راهنمای تعمیرات

- 54G CEINT/G pre-tensioning seat belts harness left.
- 54D CEINT/D right hand pre-tensioning seat belt harness.
- 55 SGC driver's seat harness.
- 56 SGP passenger seat harness.
- 57 SG/ AR rear seat harness.
- 57 SG/ AR/G left rear seat harness.
- 57 SG/AR/D right rear seat harness.
- 59 CLM heater harness.
- 60 P/C driver's door harness.
- 61 PARGB hinged left rear door harness.
- 62 PR/G rear left-hand door harness.
- 63 PARDB hinged right rear door harness.
- 65 P/P front passenger door harness.
- 67 PR/D rear right-hand door harness.
- 68 TO sun roof harness.
- 71 AR rear harness.
- 71G AR/G rear left-hand harness.
- 71D AR/D rear right-hand harness.
- 72 F/STP brake light harness.
- 73 HP/AR rear loud speaker harness.
- 73G HP/AR/G left rear loud speaker harness.
- 73D HP/AR/D right rear loud speaker harness.
- 74 EV/VL tailgate wiper harness.
- 76 VL tailgate harness.
- 76G VL/G tailgate left-hand harness.
- 76D VL/D tailgate right-hand harness.
- 79 COF boot harness.
- 80 AR/SP rear harness under floor .
- 81 TAC fuel filler cap harness.
- 84 CAP EL electric hood harness.
- 85 ECL number plate illumination harness.
- 86 BR/CAP electric hood buzzer harness.
- 90 CHR/MT engine tacho graph harness
- 91 CHR/PB fascia tacho graph harness.



**CODING:1203ZZ1906201/1**  
**DATE:07/1380**